

## Prime PRO300

## Quick guide: First installation

 
- Turn the housing counterclockwise and carefully remove the slider out of the housing.
- 2. Scan the product specific QR code on the slider.
- 3. A web page with the initial settings is opened. Choose the preferred settings for your modem, such as: Wakeup interval, Send interval, Battery, Location, Timezone.
- Click on button "Apply settings". Set-up of modem is ready now.
- 5. Connect the antenna.
- 6. Connect the sensor cable to the sensor port on the bottom of the modem.
- 7. Place the batteries in the holder. Take notice of + and -.
- 8. The modem establishes a connection and will collect and set retrieved data.
- 9. Carefully slide the modem back into the housing tube and fasten the slider into the housing with a turning movement, completely to the top cap. **No gap** should remain between housing tube and top cap.
- 10. If the sensor is not showing in the portal, tap with the magnet 5 times to autosetup the modem.
- 11. The connection LED shows the modem activity status.

	Description
Blinking fast (green)	Starting auto-setup
Blinking slow (green)	Performing auto-setup or data transmission
Steady (green)	Auto-setup successful
Blinking (blue)	The modem is in setup mode waiting for command strings on the BLE
Blinking (red)	Error
OFF	The modem is operating normally

12. Install modem, cable and sensor in the monitoring well.

For more information on the use and configuration of the Prime PRO300, we refer to the manual on our website.

Make sure you have read and understood the manual before using the modem.



Connection/Error LED and Start Switch

Meet the difference