




# *Technical Note*

## *CPT and Dissipation Tests*

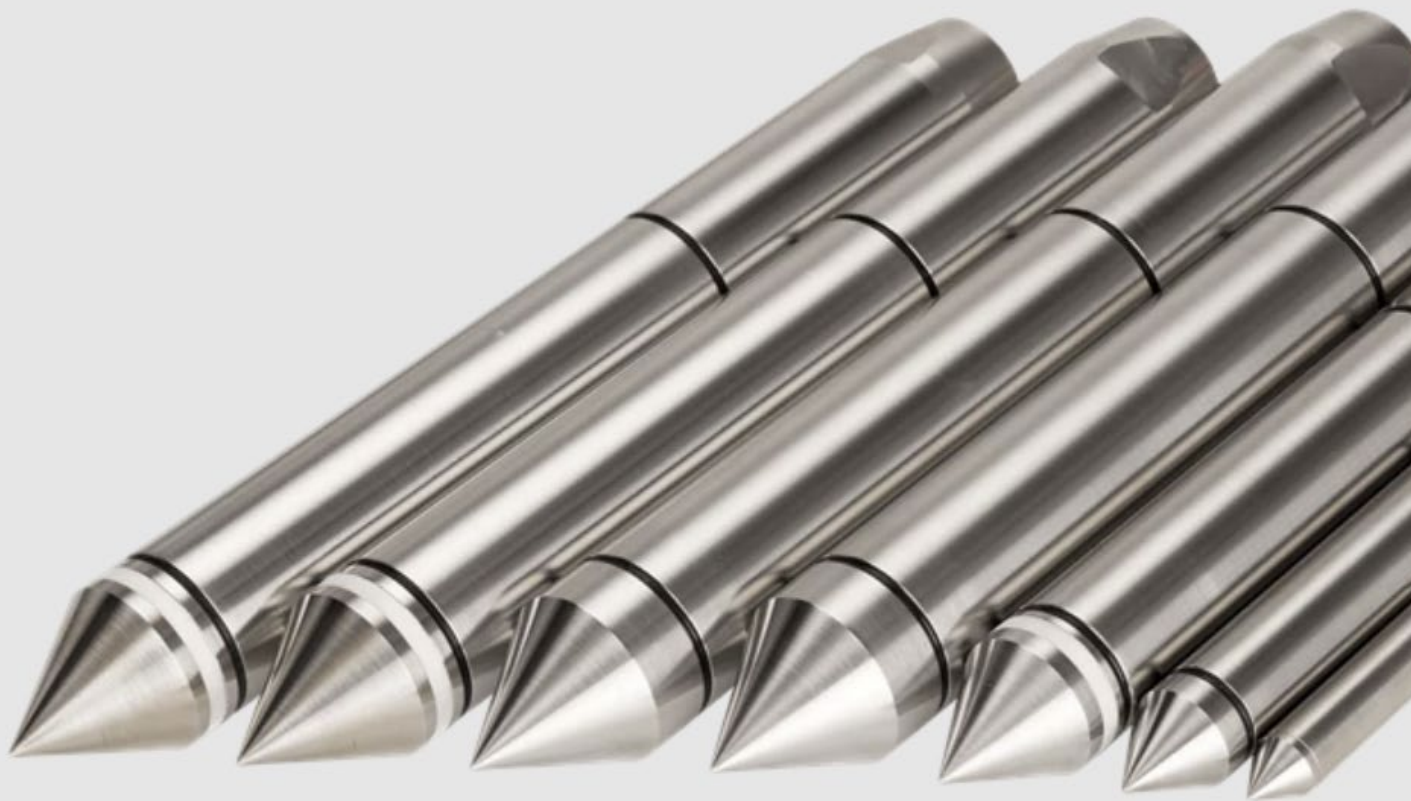



## Technical Note: CPT and Dissipation Tests

### Introduction

During Cone Penetration Testing (CPT) the cone tip resistance and sleeve friction are measured together with, in most cases, the pore pressure. However, as the cone is moving through the soil, the pore pressure measured is not the hydrostatic pressure at the cone tip depth, but the dynamic pore pressure. In order to determine the hydrostatic pressure, the test has to be paused (i.e., the penetration into the soil has to be stopped) and the excess pore pressure has to be allowed to dissipate. This is the principle of the dissipation test and this document will briefly discuss the procedure and advantages of adding the dissipation test to CPT operations.

### Pore Pressure: Dynamic, Excess and Hydrostatic

One of the principles of CPT is that the cone is pushed down at a constant speed of 2 cm/s (0.8 in/s). As the cone moves downwards, excess pore pressure builds up around the cone tip and this means that the cone measures the dynamic pore pressure (normally  $u_2$ , see Figure 2), which is the sum of the excess pore pressure ( $\Delta u$ ) and the hydrostatic pressure ( $u_0$ ).

Whenever the cone penetration is stopped this excess pore pressure begins to dissipate and over time the pore pressure will revert to the hydrostatic pressure. The rate with which that occurs depends on the coefficient of consolidation, which in turn depends on the compressibility and permeability of the soil.

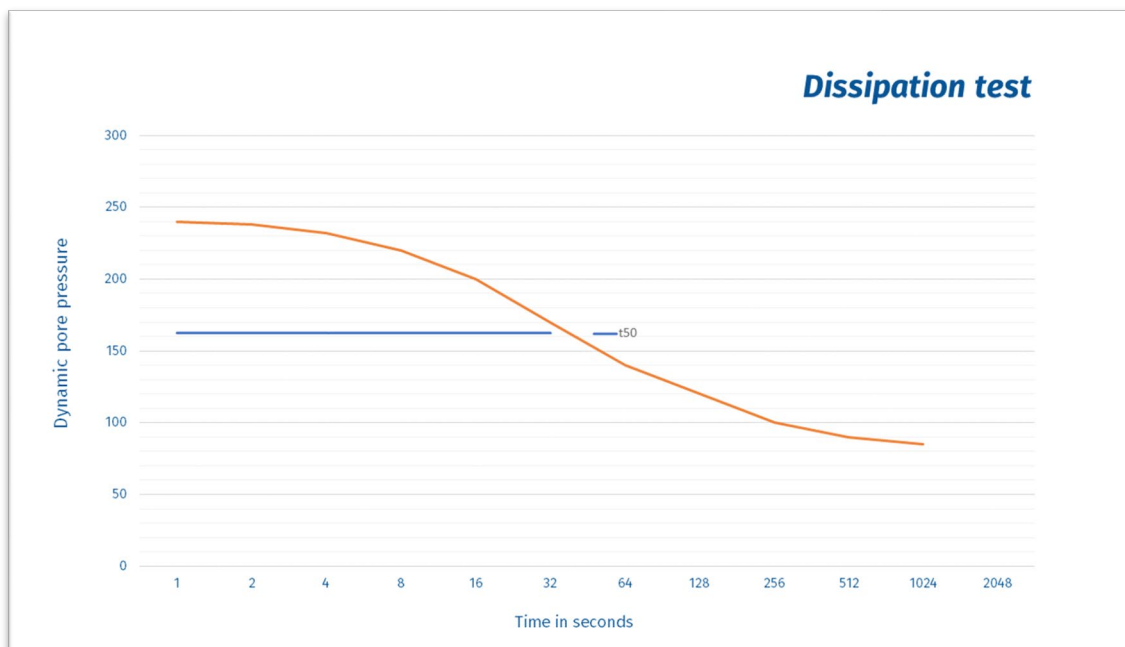


Figure 1: A CPT Dissipation test where pore pressure is recorded against time






## Test Procedure

The procedure for performing a dissipation is very simple. Of course the test relies on using a piezocone, so that pore pressure is measured. To perform a dissipation the user simply pauses the penetration, unclamps the tubes and starts the dissipation test in the CPT acquisition software. It is important that this is all done quickly; as soon as the penetration is stopped the dissipation of the excess pore pressure is occurring, whether it is being recorded or not. The test is completed when the pore pressure measurements remain constant and reflect the hydrostatic pressure at the depth where the cone is located.

A very important part of the procedure starts before the test, that is the piezocone saturation or de-aeration. If the saturation process has not been properly carried out, the pore pressure response will not really reflect the dynamic pore pressure, and therefore data from dissipation testing may be inaccurate. For more detailed information on the de-aeration of piezocones please refer to the Technical Note on Piezocone Preparation on the Royal Eijkelkamp Knowledge Hub.

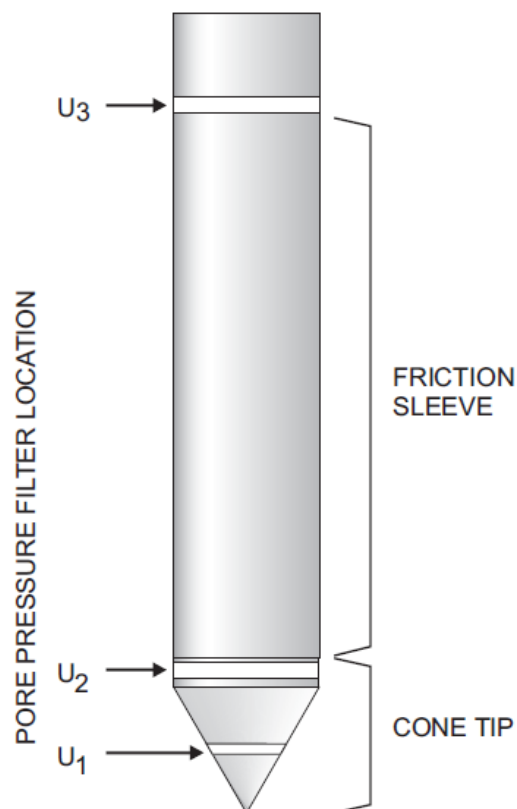

*Figure 2: Filter locations  
Image source: ASTM D5778*

## Drained vs Undrained Penetration

The type of soil encountered during CPT will govern how much excess pore pressure builds during penetration and the also the time required for that excess pore pressure to dissipate. In





free draining materials, such as clean sands and gravels, pore water is able to drain in front of the advancing cone. This means that little, if any excess pressure is generated and the measured dynamic pore pressure is very close to hydrostatic pressure. As a result, dissipation tests in sands will be very quick. It may actually be so quick that by the time the CPT tubes are unclamped the excess pore pressure has dissipated completely. In such cases the test should be repeated slightly deeper without unclamping the tubes.

In slow draining materials, such as clays and silts, pore water is unable to drain in front of the advancing cone and pore pressure builds up easily. This means that the excess pressure is high, the pressure decays slowly, and therefore the dissipation test will take much longer.

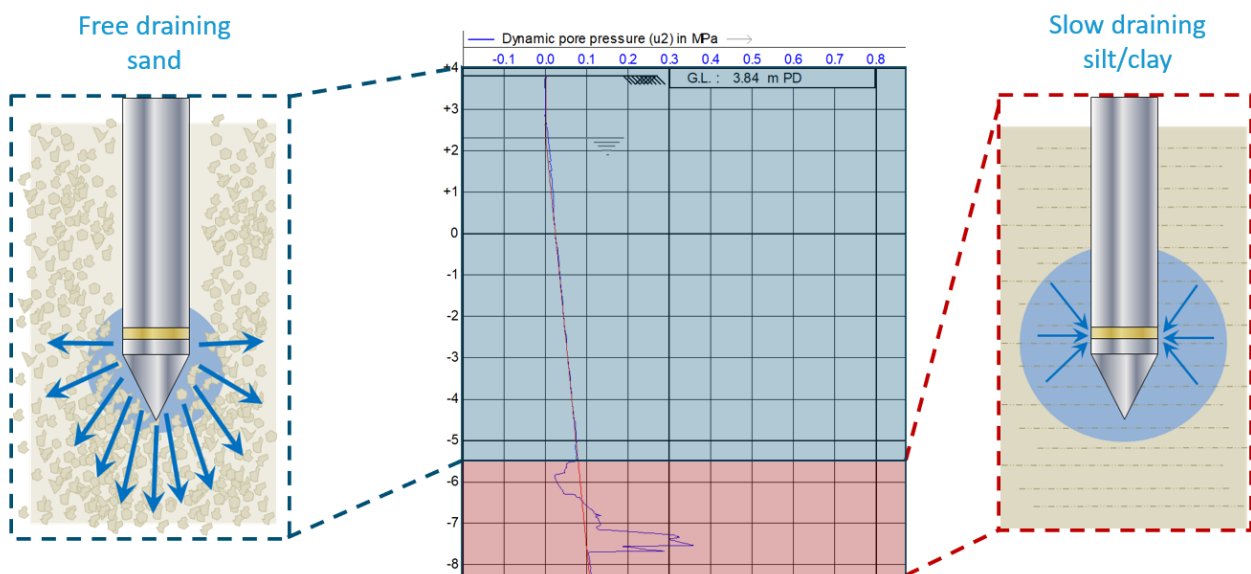


Figure 2: Pore pressure response during drained vs undrained penetration  
Image source: Cone Consultants Ltd, UK

## Contractive vs Dilative Soils

The typical image of a dissipation test is a positive excess pressure, decaying downwards to a lower value of hydrostatic pressure over time. However, dissipation tests can often be more complicated depending on the soil encountered.

In contractive soils the individual soil particles compact and become closer together during penetration. This reduces pore space and creates excess pore pressure. However, in dilative soils voids form in the soil during penetration causing negative excess pressure to be observed.

The soils encountered therefore govern the response of the soil to penetration and the resulting shape of the dissipation test. Various dissipation types can be seen in Figure 4.



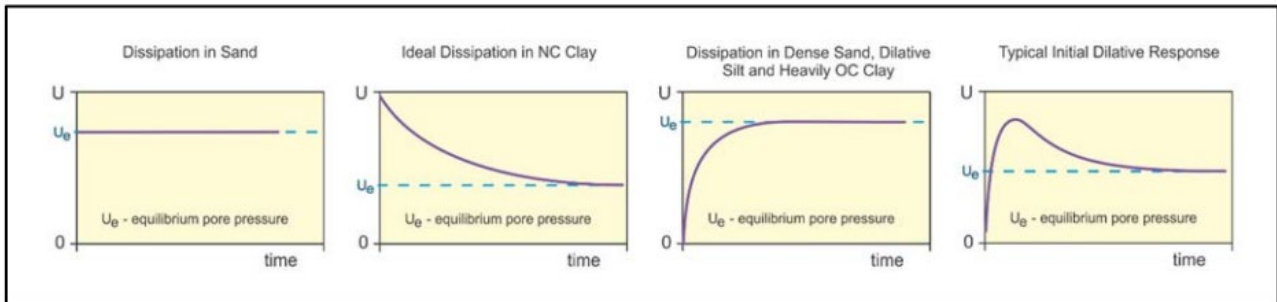


Figure 3: Various dissipation types of the Dissipation Test  
Image source: Cone Consultants Ltd, UK

One use of the dissipation test is to assess the hydrostatic pressure at a given depth. The hydrostatic gradient can then be used to back calculate the water table level. If this is the objective, the test duration depends on the time required for the entire excess pore pressure to dissipate. While a dissipation test can be performed at any required depth, it only makes sense to perform the test in a sand or gravel layer; where the soil conductivity is much higher than in a silt or clay layer. Performing the test in sand or gravel would take no more than a few minutes, while in silt or clay layers the test could easily take hours, or even more than a day.

Another use of the test is to determine the hydraulic conductivity of the soil layer where the cone tip is located. In that case the test needs to be performed in that particular soil, but it is normally sufficient to reach 50% dissipation ( $t_{50}$ ), Figure 5, and then use the correlation shown in Figure 6 to determine the hydraulic conductivity.



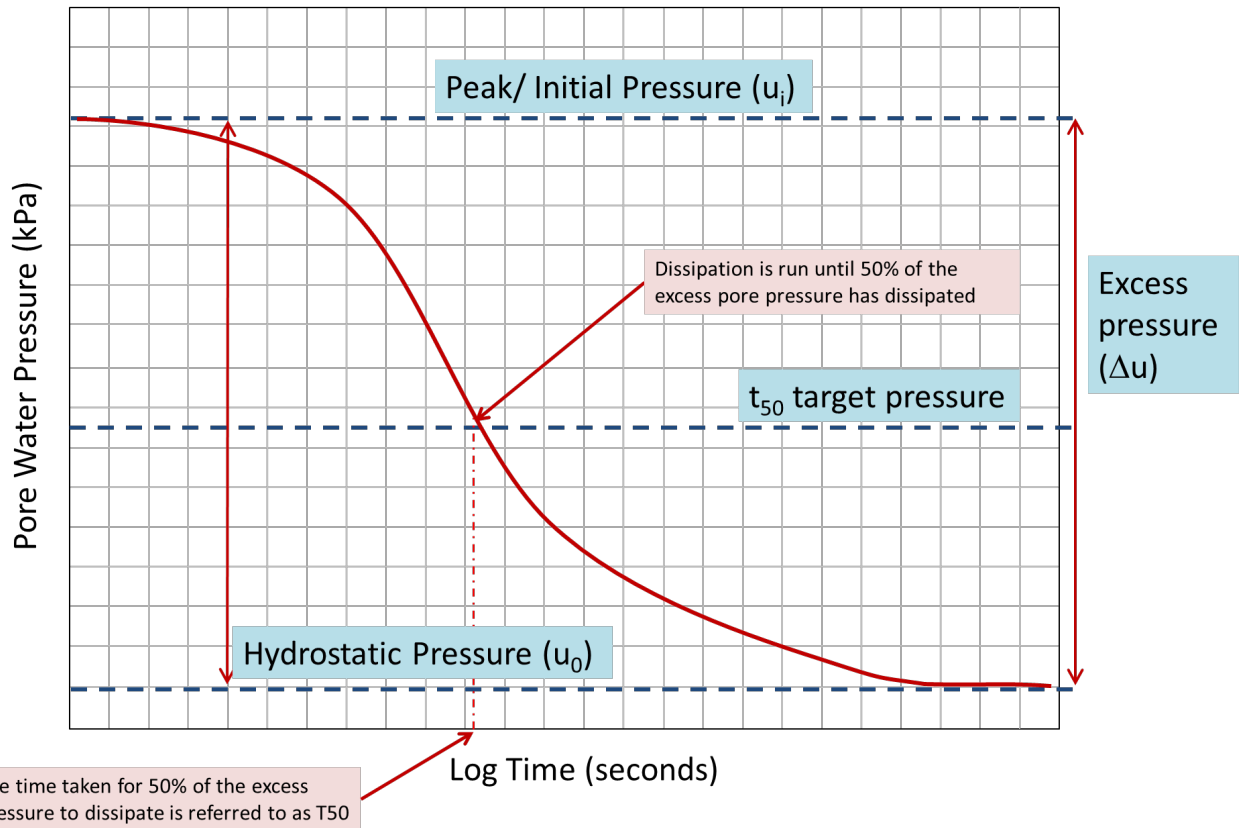


Figure 4: Calculation of  $t_{50}$   
Image source: Cone Consultants Ltd, UK

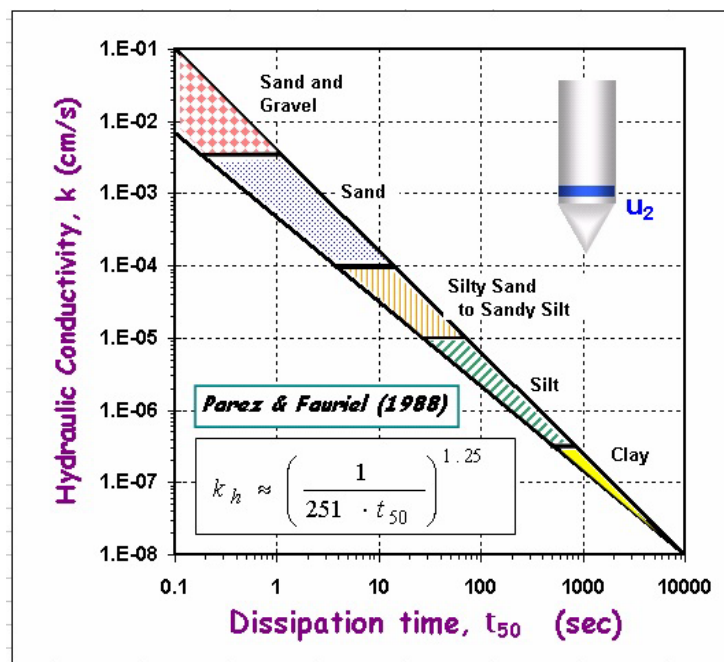


Figure 5: Analysis of  $t_{50}$   
Image source: Parez and Fauriel (1988). "Le piezocone ameliorations apportees a la reconnaissance de sols." Revue Francaise de Geotech 44: 13-27





## Summary

To perform a dissipation test does not require any additional equipment or set-up when compared with a standard piezocone CPT (CPTu) and it can be performed at any time during a CPT sounding. And, as is the case with the CPT results in general, the results are instantaneous, which means that the test outcome can be taken into account for the remainder of the CPT program at that particular site.

Performing a dissipation test is a useful addition to a CPT program at a particular site and should be considered as a standard part of each CPT program. If you would like more information on this test or any aspect of Cone Penetration Testing then please get in touch with one of our CPT experts on [CPT@eijkelkamp.com](mailto:CPT@eijkelkamp.com).

## Meet our specialists

Royal Eijkelkamp is a provider of a full range of Cone Penetration equipment: mechanical, electrical and sonic CPT. For more information about these products please visit our [website](#), or feel free to contact our CPT specialists:



Gerald Verbeek

+1 903 216-5372

[g.verbeek@eijkelkamp.com](mailto:g.verbeek@eijkelkamp.com)



William Bond

+44 (0) 7 852 599 256

[w.bond@eijkelkamp.com](mailto:w.bond@eijkelkamp.com)

[cpt@eijkelkamp.com](mailto:cpt@eijkelkamp.com)

